

Transponder Guidance



Dear Teams,

With the beginning of a new season, please ensure that you add transponder subscriptions and testing to your pre event check list to ensure that your Transponder will work when you arrive at the circuit.

Mylaps TranX 260 Transponder



Direct Powered TranX 260 – Driver ID

The TranX260 transponder was manufactured as Direct Powered (DP) version, with no requirement for a subscription. These units are no longer available to purchase new, however they are still recognised by the TSL timing system.

Direct Powered

Polarity


Connect the red wire to the +12V (fused circuit) and the black wire to ground (chassis). If the transponder is correctly installed and there is 12V present on the wires, the Green LED lights continuously. When using the Driver Switch, the LED will flash the corresponding number of times to the Driver ID selected. For example, Switch position 2 = Green LED flashes twice

Mylaps X2 Transponder



4. Technical specifications

4.1. What is in the box

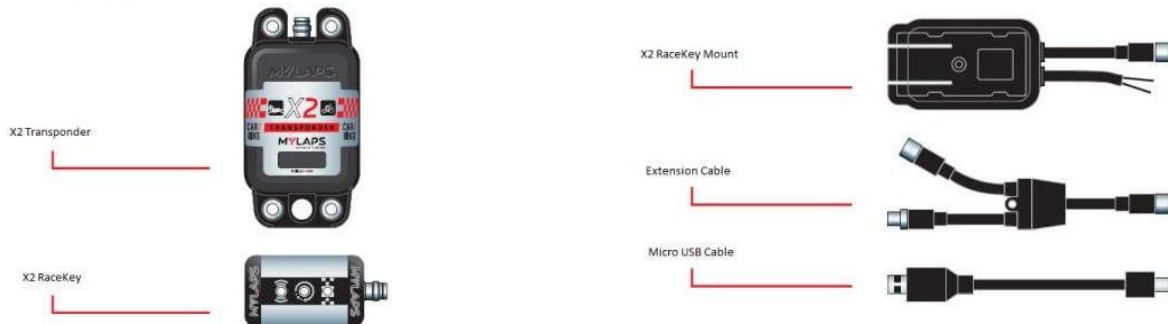

X2 Direct Powered Transponder

This is a subscription-based transponder. Only direct powered X2 transponders are to be used for GT racing with the appropriate Driver ID switch.

Please ensure that your subscriptions are up to date. Follow the instructions below to check your transponder.

1. Start MYLAPS Connect software and log in. In case you do not have the software, click [here to download](#)
2. Open MYLAPS Connect and select <individual>
3. <login> with your email address and password
4. Connect your RaceKey to the computer
5. You will see an overview of your registered transponders. Click on the transponder you would like to review
6. The software will advise you if the Transponder requires a new Subscription
7. Follow the on screen information to update your subscription if required

Further details are available at the Mylaps Website – Click [here](#)

YouTube Guide to activating an X2 Transponder – click [here to watch](#)

Mylaps X2 Transponder Manual (PDF) – click [here to download](#)

Mylaps TR2 Transponder



This is the latest generation of Mylaps transponder, there are both subscription and no-subscription options. Only direct powered TR2 transponders are to be used for GT racing with the appropriate Driver ID switch.

You will require the Mylaps Speedhive App to register and activate your transponder. The TR2 transponder is only compatible with Bluetooth 4.0 or higher (most modern phones have this).

Please ensure that your subscriptions are up to date. Follow the instructions below to check your transponder.

Speedhive app

1. Open the Speedhive app on your smart phone and login with your credentials
2. Go to <profile> and select your transponder
3. You will see an overview of your registered transponders. Click on the transponder you would like to review
4. The software will advise you if the Transponder requires a new Subscription
5. Follow the on screen information to update your subscription if required

If you needed to renew the subscription, you have to synchronize the subscription to your transponder:

1. Make sure the Bluetooth on your Smartphone is on
2. Open the Speedhive app on your smartphone
3. Go to profile and select the transponder
4. Make sure you are within 2 meters from the transponder with your phone

Further details are available at the Mylaps Website – Click [here](#)

YouTube Guide to activating a TR2 Transponder - Click [here to watch](#)

Mylaps TR2 Transponder Manual (PDF) – click [here to download](#)